


GTXImage CAD™ Series V11.5

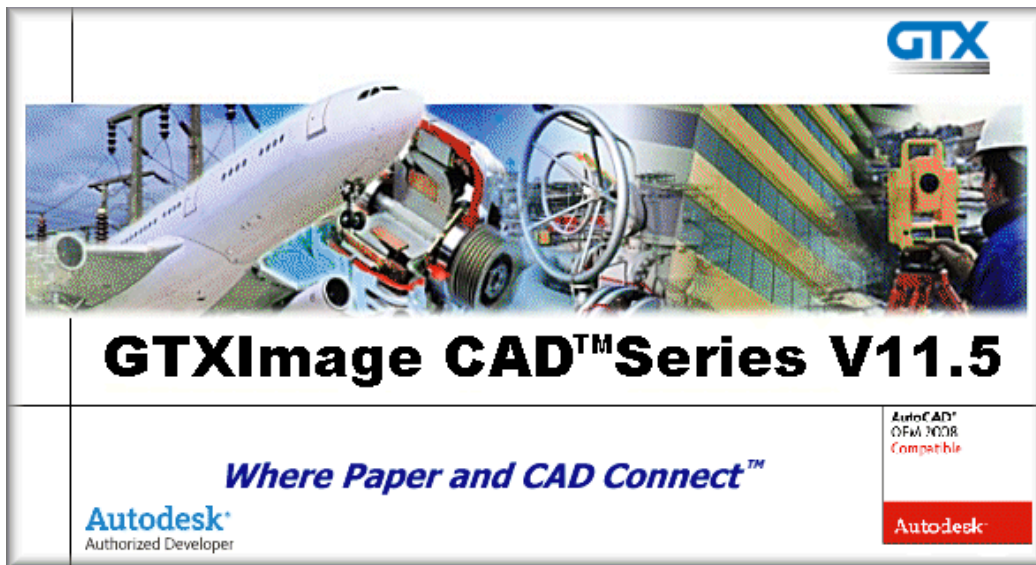

Training Guide

Version 11.5
Revision 1 – 9/08

Table of Contents

Table of Contents	Pg 2
Introduction	Pg 3
Tutorials – Getting Started	Pg 4
Tutorial 1: Raster Cleanup	Pg 5
- Raster Enhancements	Pg 6
- Editing Raster Geometry	Pg 8
Tutorial 2 : Raster to Vector Conversion	Pg 16
- Converting Raster to Vector	Pg 17
- Converting Raster Text to CAD	Pg 18
Tutorial 3: Working with Color Images	Pg 23
- Color Reduction	Pg 25
- Color Separation	Pg 26
Command Reference	Pg 29
- Function Keys	Pg 29
- Raster Picking Options	Pg 30
- Raster Snapping Options	Pg 32
- Raster Commands	Pg 33

GTXImage CAD™ Series V11.5

Training Guide

Introduction

Thank you for your interest in the GTXImage CAD Series, This is the latest Standalone software technology application from GTX Corporation, which enables you to manipulate and Raster-To-Vector convert scanned paper drawings.

This guide has been produced to help you get the most out of your Demo CD as quickly as possible. This guide is not intended to be a full training manual, it is intended to give the basic commands to allow you to install and run the GTXImage CAD Series product.

Please note that the Demo CD includes other GTX products, such as GTXRaster CAD® (which runs inside AutoCAD) and GTXOSR® (which is used for batch conversions of scanned drawings into vector). However, **this guide concentrates only on the GTXImage CAD Series products.**

Product Overview

The GTXImage CAD Series consists of two software products - GTXImage **CAD** & GTXImage CAD **PLUS**:

GTXImage CAD loads raster images and allows image clean-up, restoration & comprehensive editing.

GTXImage CAD PLUS provides the same functionality as GTXImage CAD, with the added capability to convert binary raster into AutoCAD vector entities & text.

Product Functionality.

		Product Functionality				
Product Level	Raster Cleanup	Raster Editing	CAD Drafting	R2V Conversion	ICR Text Conversion	Batch Conversion
GTXImage CAD	X	X	X			
GTXImage CAD PLUS	X	X	X	X	X	X

This demonstration CD allows you to install an **Evaluation Copy** of **GTXImage CAD Series** products. This option allows you to experience the real capabilities of loading and working with scanned raster image files, including raster editing and raster conversion capabilities within GTX. It requires **no** additional software (such as AutoCAD) to run. The evaluation software allows you to use all the functionality except you cannot Save and Plot modified files. To evaluate the product to its full we suggest that you Install GTXImage CAD **PLUS** level product.

Also available on this CD is a technical "White Paper" **How to Integrate Paper with CAD**, which discusses in detail the reasons, issues and technology used to integrate paper based drawings into a CAD environment. If your company is addressing these issues for the first time we strongly recommend that you read this first. It is on the CD in the INFO\MISC Directory called **WhitePaper.Doc** or **WhitePaper.PDF**

Product Data Sheet providing full specifications on GTXImage CAD Series, is available in both Windows Help and Microsoft Write formats. These are to be found in the INFO\ICAD Directory on the CD.

Tutorials

Getting Started

You can now use the following tutorials to learn the GTXImage CAD *PLUS* software. These basic tutorials will provide an idea of how the GTXImage CAD *PLUS* software can be used for various raster editing and conversion operations.

Working through these tutorials will help you become more familiar with the ways the GTXImage CAD product operates and what you can do with them.

Depending on how you learn best, there are two ways of treating the tutorials.

1. You can follow the instructions literally to learn how each command and feature works.
i.e. Follow the step-by-step instructions and watch the results of each command.
2. Or, having grasped the basic functionality, you can try other commands to accomplish certain goals.
i.e. Most commands can be invoked from both the pull-down menu and the toolbars.

These tutorials were written using millimetres (MM) values for dimensions.

A Typical Raster Editing Session

Many scanned raster images need some cleanup before detailed changes are made. A typical editing session begins with global raster enhancements (Crop Raster, Despeckle Raster, Erase Raster), which affect most or all of the drawing. More detailed changes are made once the drawing is cleaned up.

1. Since raster files can be quite large, the first step is to get rid of meaningless or unwanted raster. This reduces memory requirements and "cleans" the image.
2. Orthogonal geometry is very important in technical drawings, which are often scanned at a slight rotation. You should deskew them before doing any other processing (Deskew Raster or AutoDeskew).
3. Next, perform editing functions that involve the whole drawing or large areas of the drawing (Mirror Raster, Cut Raster to File/Buffer, Paste Raster from File/Buffer).
4. Completely edit geometry in one area at a time, inserting missing objects and correcting distortions using the GTXImage CAD Series commands. You can choose to leave new entities in vector format or rasterise them using "Burn Raster" or Convert Vector to Raster. Raster Snapping methods assist you to select points on raster intersections, ends, edges, etc.
5. Draw and edit text. or, use Text Convert to convert hand written text to ASCII text entities.
6. Look at the whole drawing and make any changes required and ensure correct alignments (Copy Raster, Move Raster, Rotate Raster and Smooth Raster).


Tutorial 1: Raster Cleanup

In this lesson you will load a raster file and clean it using raster enhancement commands. You will then edit it using a combination of raster and vector based commands. This tutorial uses the pull down menus for commands. When the first screen appears you can close all of the GTX toolbars because you will use the drop down menus during this session. This tutorial is suitable for both GTXImage CAD and GTXImage CAD PLUS


Load a Raster File

Once GTXImage CAD is running, select **File\Quick Image Attach** from the pull down menu.


1. Select **File\ Quick Image Attach**
2. The **Open Raster File** dialog will appear, select (c:\Program Files\GTX\Image CAD\Sample) **gtxarch.cg4** as shown and select **open**.

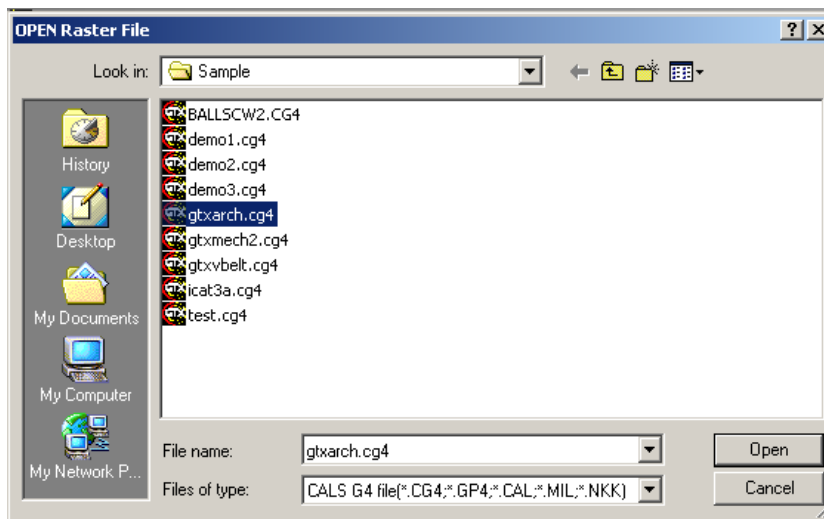

gtxarch.CG4 After Loading:

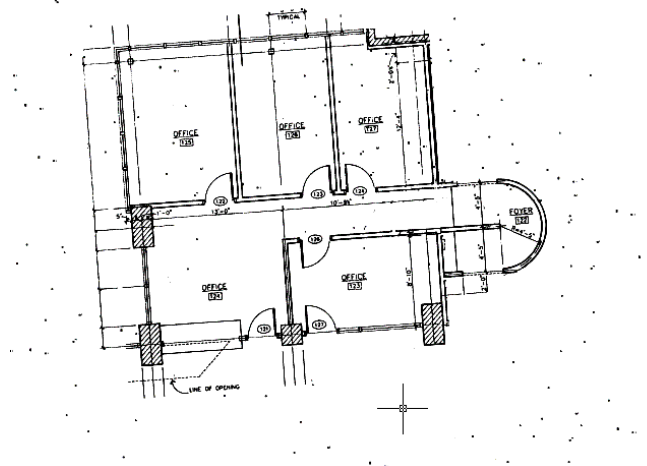

3. If the image comes in vertically instead of horizontally you can turn the complete image using **Enhance \Turn Raster** from the pull down menu. (Type 90 or 270 degrees when prompted).
4. Through the pull down menus go to **View \Zoom \Extents**. This zooms in to the image so that it fills the screen.

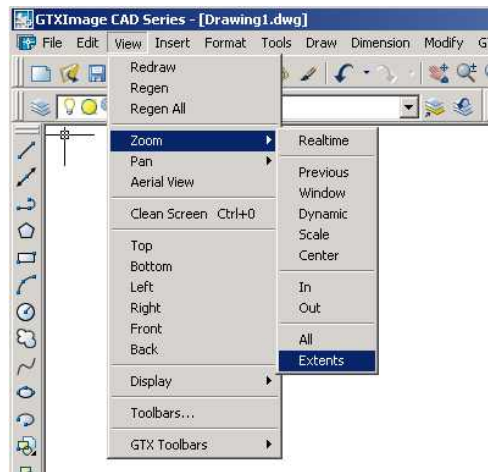

Raster Enhancements


Straightening the Drawing

This drawing is skewed (slightly rotated). You will use the Auto Deskew Raster command to straighten it.

Select **Enhance \Auto Deskew Raster**

The deskewing process will automatically straighten the drawing. The screen will be redrawn at the raster limits.

gtxarch.CG4 After Deskewing:

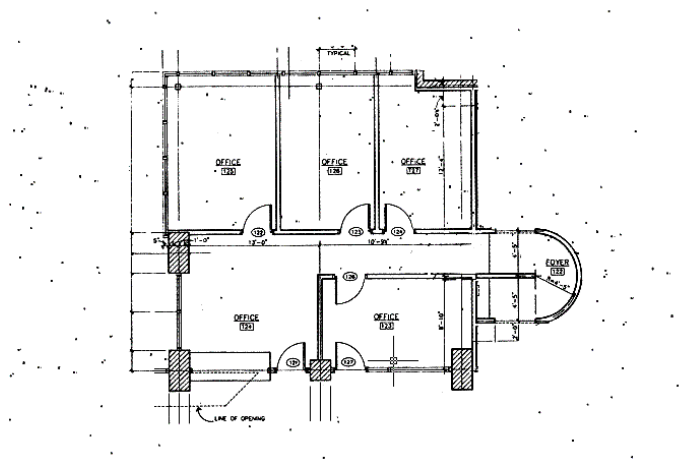

Clean Up Raster Borders

The enhancement process is intended to remove meaningless raster, letting you keep only the raster data that conveys meaning. The edges of scanned drawings are often darkened, torn or speckled. **Crop Raster** is a quick way to delete the unwanted raster data. All raster outside this window is erased. **Crop Raster** will decrease the size of the file.

1. Select **Enhance\Crop Raster**.


Select first corner of window :

2. Select a point near the lower left corner of the drawing.

Select opposite corner of window :

3. Select another point near the top right of the image so that the window encloses all of the meaningful raster data. Anything outside the window will be deleted.

qtxarch.CG4 After Crop Raster:

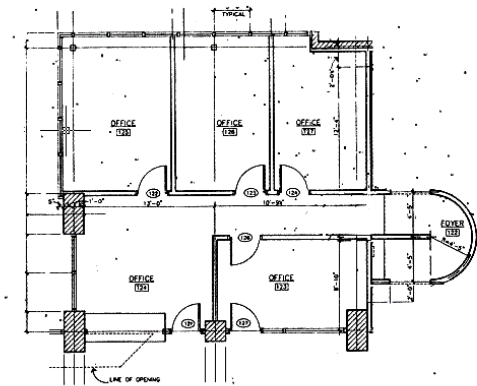

The speckles outside the window will be deleted. If you accidentally made the window too small and deleted part of the drawing, use the **Edit/Undo** command then repeat the above steps 1 through 3.

Remove Raster Speckles

Scanned drawings often contain unwanted smudges, gaps, stray lines and speckles. Crop raster removed the speckles at the drawings' edge, but there are still many speckles in the middle. The Despeckle Raster command can be used to filter speckles from the image without removing meaningful geometry such as decimal points. You can also use it to fill in small gaps and solid raster.

First, indicate the maximum size for the speckles (or holes) to be affected, then indicate whether you want to delete speckles or fill in holes.

Then, window the areas containing speckles or holes. If punctuation marks or other significant objects are highlighted, remove them from the pick list. The advantage of Despeckle Raster is that you can make the windows quite large since only objects fitting the speckle size will be affected. If unwanted speckles still remain after the first pass, you can change to a larger speckle size for another pass just in the areas of the speckles.

Select **Enhance\De-Speckle Raster**.

Speckle size <0.00>/Box/Pick :

1. Type **P (Pick)** followed by **[Return]** which will allow you to select a fairly large raster speckle

Select raster speckle:

2. Select a reasonably large raster speckle and click on it.


Mode <Delete speckle>/Fill hole:

3. Press **[Return]** to select delete speckle.

Select raster <window>

4. Type **View** to select all speckles, smaller in height and width than the speckle that you selected, within the current view. All such speckles will be highlighted on screen. If you have selected some data that you do not want deleted you can deselect by pressing **R (to remove)**, **[Return]**, and Window the objects that you do not want deleted. Similarly you can add by pressing **A (To add)**, then selecting the raster area that you want to add.
5. When you are satisfied that the selected raster contains speckles to be erased, press **(RETURN)** to complete the speckle erase process.

gtxarch.CG4 After De-Speckling

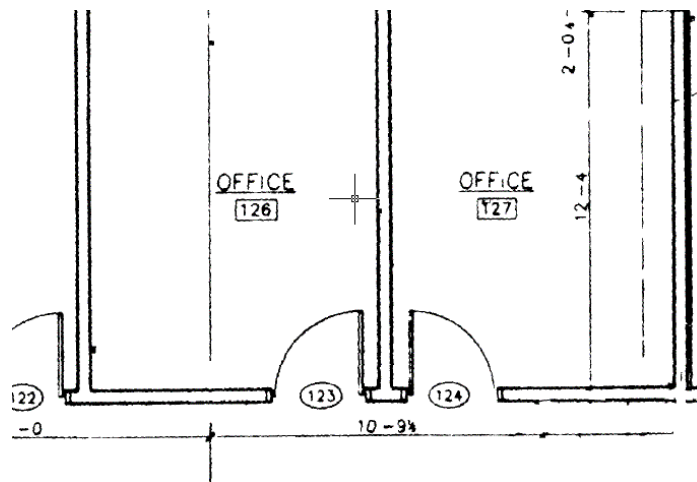

6. You will see that some larger speckles remain on the drawing. These speckles are obviously larger than the filter size entered. You could now erase these by **Modify/Erase Raster**. Try Despeckling the rest of the drawing taking care not to remove the dashes of the centre line.


Editing Raster Geometry

You are ready to use the GTXImage CAD raster commands to change the drawing.

Copy Raster Geometry

1. Zoom into the upper left of the drawing. You will copy the room (Office 125) into the blank space at its left.

2. Pan around until you get a full view of both the upper-left room and the empty space to its left (**using View/Pan, View/Zoom Window or View/Zoom All**).

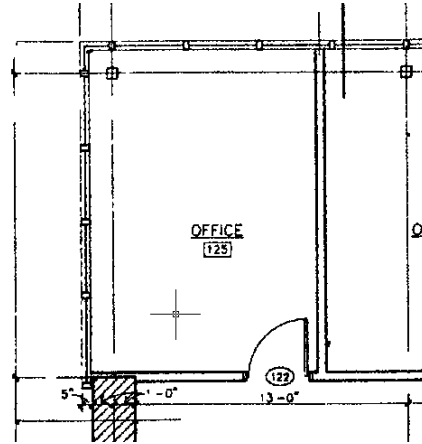

3. Select **Modify/Copy raster**

Select raster <WINDOW> :

4. Use the **Window** option to select the room (Office 125). You do not want to copy everything, however.
5. Type **R** for **Remove**.

Remove raster <WINDOW> :

6. Type **L** for **Line**.

Remove raster <WINDOW>: Line
Select one end of reference line :

You will remove the horizontal dimension line just below the top wall of the room.

7. Select a point beyond the left end of the line.
8. Select a point beyond the right end of the line. The line will be removed from the selection set.

Remove raster <LINE> :


9. Press **[RETURN]** to finish selecting raster geometry.

Base point or displacement:

10. Select a point near the lower right corner of the room.

Second point of displacement :

11. Select the point for the copy placement. It should be to the left of the drawing, so the results appears as shown below.

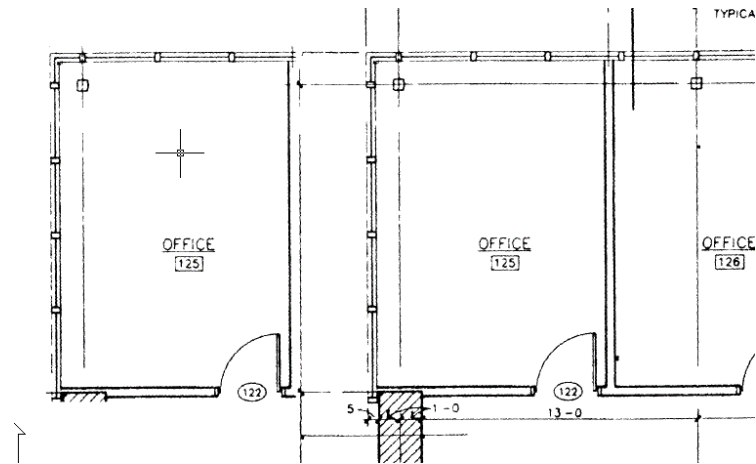


Remove Raster Geometry

You will use the Erase Raster command to remove the text, the vertical line and the little box where the lines intersected.

1. Select **Modify/Erase Raster**

Select raster <Inside>:

2. Window around (OFFICE 125), the vertical line and the little box.
3. The selected Raster will be highlighted.
4. Press **RETURN** To Delete Text (Results shown below)

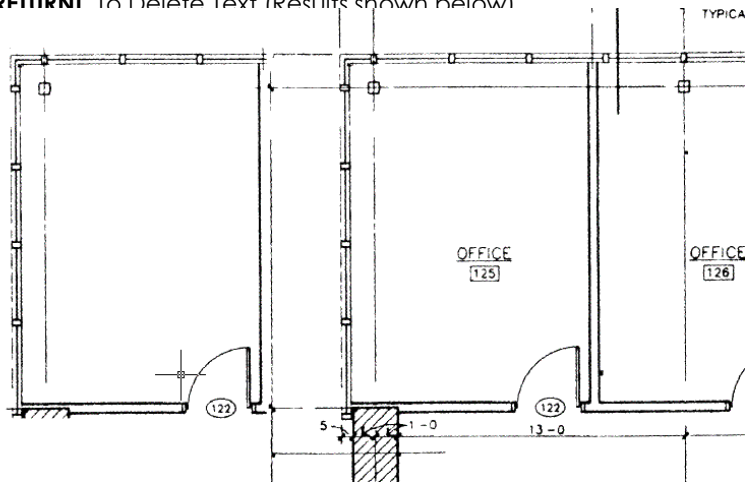

Resize Raster Geometry

Select **Modify/Scale Raster**

Press **(RETURN)**.

Select Raster <Inside>.

Press **(RETURN)**.

Select Base Point (Top Right).

Scale factors <1.0,1.0>/Fit :


5. Type 1.3,1.3

Press **(RETURN)**.

The room will be enlarged. You may need to Zoom out to see it.

Add Vector Geometry

6. Select **Draw/Polygon/Rectangle**, draw a rectangle to represent a desk. Keep some space in between the table and the top wall as shown in Figure 10 below.
7. Select **Draw/Circle/Centre, Diameter** and draw a circle to represent a chair.

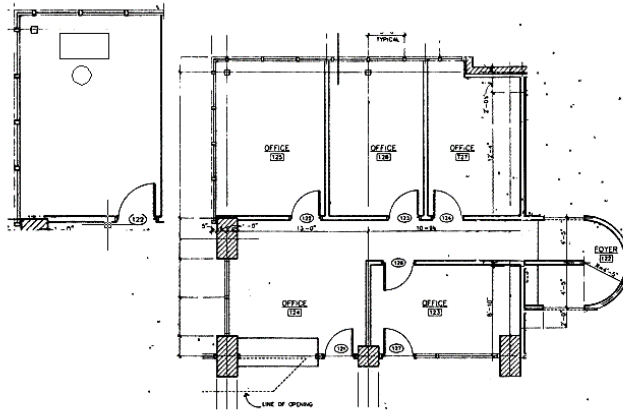

Rasterize Vector Geometry

Now you can incorporate these vector entities into the raster drawing with the **Convert Vector to Raster** command.


1. Now select **Convert/Rasterize**.

Select object :

2. Select the rectangle and the circle representing the chair and desk.
3. Press **[RETURN]**



- Select the **Table** radio button and then the **Table Setup** button. The Line Width Configuration table will appear, showing line widths of raster entities to be generated from each colour of vector entity.

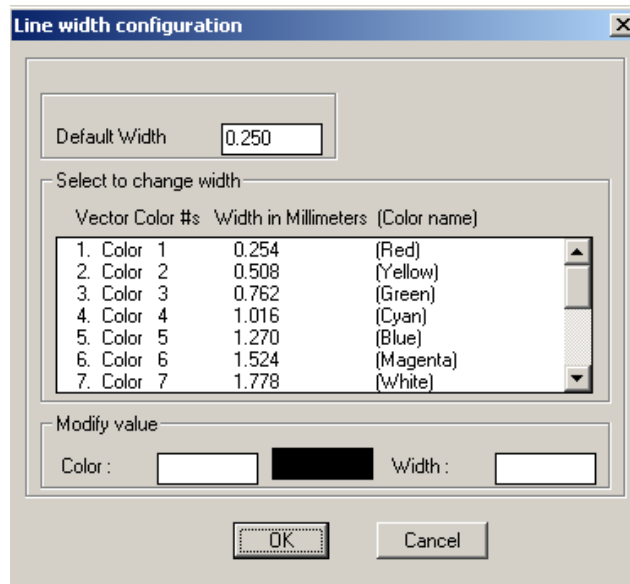


- Note the colour of the vector entities drawn and the colour's corresponding raster width and select **OK**. Select **OK again** in the **Rasterize Setup** dialog to accept the parameters.

*Rasterize in progress . . 2 segments
Percent complete = 100.0*

The entities will be converted to raster with a width corresponding to 0.7mm Metric, (assuming the entities were Colour 7 = White).

Note: You may wish to use **View/Redraw** after rasterizing to see the results more cleanly.

The table and chair have now been converted to raster

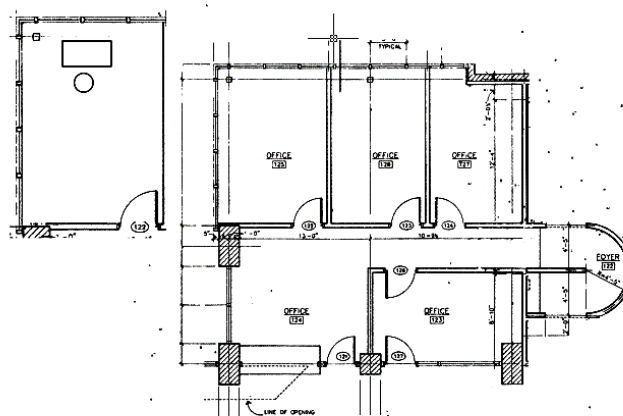

Rotate Raster Geometry

Perhaps you would prefer to have the desk turned a different way in the room. You can use Rotate Raster.

1. Select **Modify/Rotate Raster** from the menu.

Select raster <Object>:

2. Select the left mouse button on the desk. The desk will be highlighted.
3. Press **[RETURN]**.

Base Point :

4. Select a point to be the centre of rotation.(within the desk)

Rotation angle <0.0>/Reference:

5. Type: **90**

Rotate Raster lets you save or delete the original raster selection.



6. Select **Yes** to delete the original un-rotated desk.
 7. Select **Modify/Move Raster**.
- Select Raster <Object>:
8. Type **PR** to select **PRevious** raster data to reposition the image to the desired location.

Press **[RETURN]** to stop selecting Raster.

Base point or displacement

9. Select the upper left corner of the desk. A line will rubber-band from this point.

Second point of displacement:

10. Move the furniture to the right of the chair.

You can now use **Copy Raster** to insert desks at the 90-degree angle. You may want extra chairs in some of the offices and the foyer.

11. Select **Modify/Copy Raster**.

Select raster <OBJECT> :

12. This time use the Object option to select one of the chairs.

The circle will be highlighted.

Select raster <OBJECT> :

13. Press **[RETURN]**.

Base point or displacement:

14. Select a point on the circle.

Second point of displacement

15. Select the point where a chair should be placed. The copy of the circle will appear where you placed it.

16. Re-Select **Modify/Copy Raster**.

17. Type **PR** to select the **PRevious** raster to place another chair. Place several more copies of the circle just as you did before.


Saving Your Work

(NOTE: This option is not available in Demo mode)

You have now completed Tutorial 1 so the last action is to save your edited file.

1. Use the **File/Save Image** command.

Enter a filename **tutorial1** and press **Save**. This will create a new raster file.

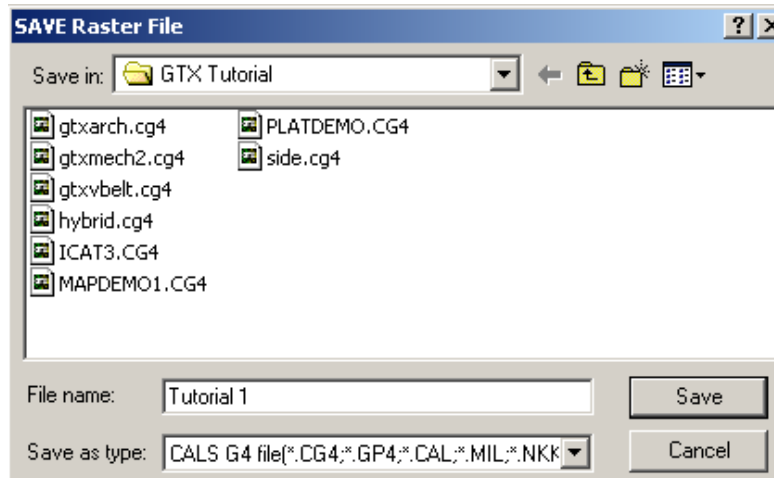

2. You could now end your GTXImage CAD *PLUS* session: **File\Exit**. You will be prompted to save any changes to the default filename "Drawing1" but as there is no vector data and you are not working in a hybrid situation, respond with **No**.

What You've Learned

Congratulations! You have completed the first lesson on cleaning up a drawing. Here is what you did during lesson 1:

1. **Loaded** a raster Image.
2. **Deskewed** a raster image, straightening it.
3. **Cropped** and **de-speckled** unwanted raster from the image.
4. **Converted vector data to raster**, to incorporate vector elements into the raster image.
5. Used a variety of raster picking and raster snapping methods.
6. **Saved** your work to a new raster file.

Tutorial 2 – Raster to Vector and Text Conversion


If you have been using **GTXImage CAD PLUS** already then we suggest you have a clean start by selecting **File\New**. Then click on **OK** from the Start From Scratch dialog box that appears.

This tutorial makes use of the GTX toolbars for commands. You can load up the GTXImage CAD toolbar by **View\Toolbars\Customize Toolbars** and selecting **GTX Main**, this is located by Right clicking anywhere in the Menu area, Highlight the ICADFULL option then select the GTX Main menu.




Load a Raster File

First of all you must load a raster file. Click on the Open Raster File button in the **GTXI Main** toolbar.

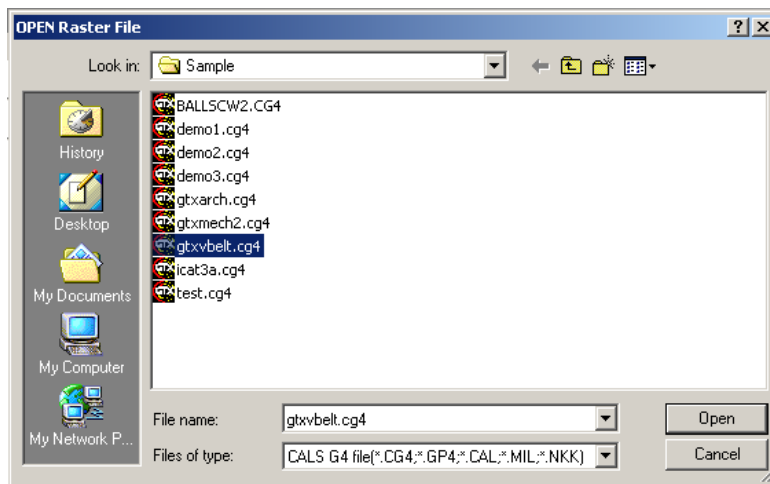

The **Open Raster File** dialog appears.

1. Select **gtxvbelt.cg4** and click **Open**. The image will then appear on the screen.

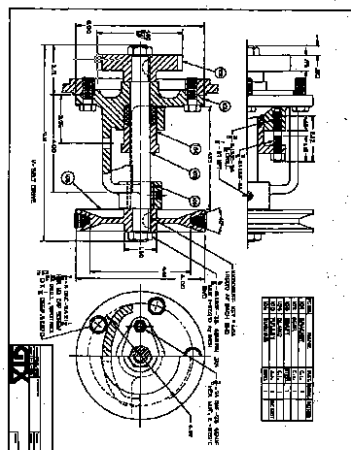

gtxvbelt .cg4 after opening


2. Before continuing with the exercise you will have to turn the drawing by using the turn button on the **GTXImage CAD PLUS** toolbar. Click on the **Turn Raster** button on the **GTX Main** toolbar.



The Turn Raster Button

When this happens you will have to Specify rotation angle <90>/180/270 select **(90)**. This will Rotate the image on the page, then zoom extents.

gtxvbelt .cg4 After Rotation

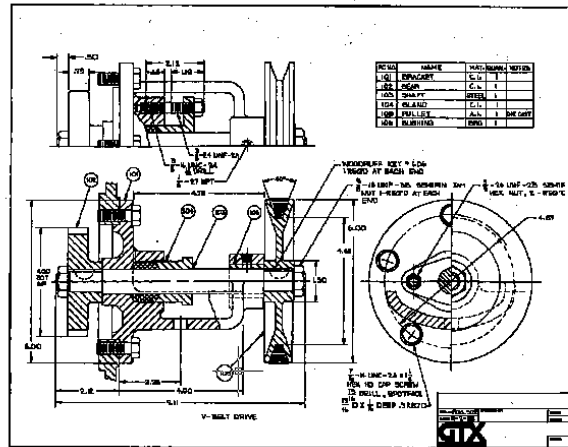

Converting Raster Geometry to Vector

Using Convert Raster to Vector

First, you will convert the table in the upper right corner to vector entities.

1. Zoom in on the table in the upper right corner of the drawing, as shown below:

PC NO.	NAME	MAT.	QUAN.	NOTES
101	BRACKET	C.I.	1	
102	GEAR	C.I.	1	
103	SHAFT	STEEL	1	
104	GLAND	C.I.	1	
105	PULLEY	A.I.	1	DIE CAST
106	BUSHING	BRO.	1	

Select The **Raster to Vector** Icon.

Select raster <WINDOW>:

2. Type **F** for Fence raster picking method.

First fence point:


3. Draw a short line across one of the table grid lines without touching any raster text.

Undo/<Endpoint of line>:

4. Press **[RETURN]** to finish drawing the fence line. This should select the entire grid without selecting the enclosed text.

Select raster <Fence>:

5. Press **[RETURN]** again to finish selecting raster. The Raster Convert Setup dialog will appear.

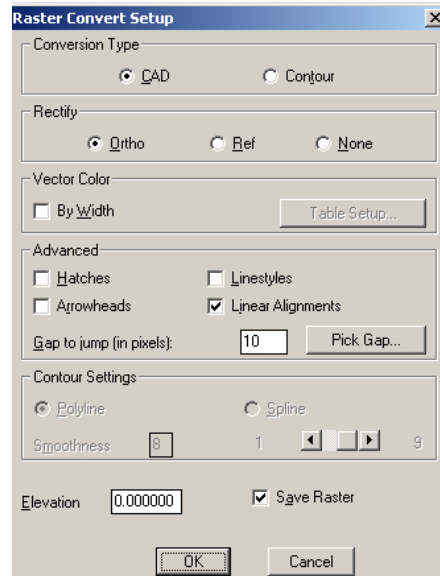

6. De-Select **Save Raster** so the original raster will be replaced with the resulting Vector entities.
7. Select **OK**.

The table will be converted to Vector lines.

PC NO.	NAME	MAT.	QUAN.	NOTES
101	BRACKET	C.I.	1	
102	GEAR	C.I.	1	
103	SHAFT	STEEL	1	
104	GLAND	C.I.	1	
105	PULLEY	A.I.	1	DIE CAST
106	BUSHING	BRO.	1	

Converting Raster Text to CAD Text Entities

Text Convert recognises selected raster text and generates CAD text entities. If a raster text character is drawn poorly or if it is ambiguous (it looks very much like another


character) the command will require you to verify it, using the Character Verification dialog.

Configuring the Text Recognition

1. Select **Configure Text Conversion Icon**. Because you have not configured text conversion yet, the Text Configuration dialog box will appear.

This dialog sets up parameters needed by GTXImage CAD PLUS to convert text into CAD text entities.

The **IOP** section limits the range of text sizes that can be selected using one of the two text iop methods. It also limits the size of distinct raster entities that can be processed by the **Text Convert** command as text. Set the **Min Char Size** slightly lower than the size of the “full

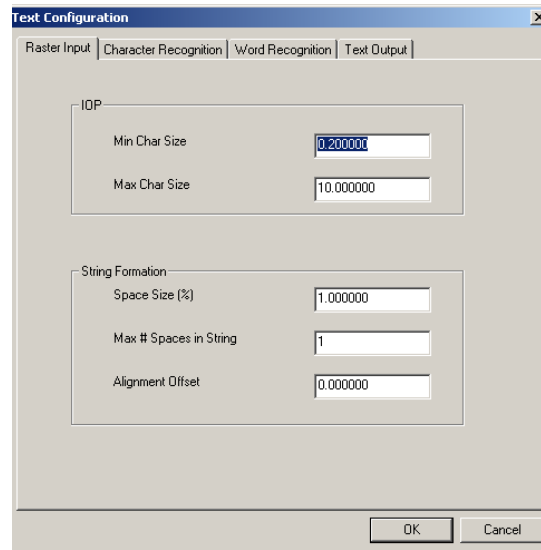


stop” punctuation mark (“.”). This ensures that such punctuations will be converted but that speckles will not.

Note: In badly speckled drawings you should use the Speckle Erase command before doing any conversion. We are skipping speckle removal because this drawing has only a few speckles.

Because text characters are sometimes touching, it is good to set the Max Char Size slightly larger than two times the size of a typical large character.

2. Set the **Min Char Size** to **0.3mm** (the default value of 0.7mm won't select all the decimal points in this table).
3. Leave the **Max Char Size** at **10.0mm**. This should work fine for this drawing because most text characters are only about 4mm tall.

The **Orientation** list contains all orientations allowed for resulting text entities. The default orientation is “0” and this will work because all raster characters in the drawing are Horizontal.

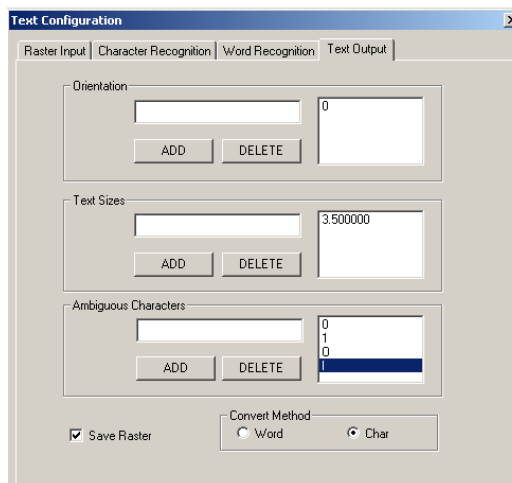


The **Ambiguous Characters** list displays all characters that, even when drawn clearly, can be confused or mistaken as another character. In this drawing, the letter "O" and the numeral "0" (zero) are lettered in the same way, using a small circle. Likewise, it is impossible to tell apart the letter "l" (capital l) and the numeral "1" (one) because both were lettered as a straight line. Adding these to the **Ambiguous Characters** list will make the **Text Convert** command show you the character before it builds it into AutoCAD text strings. This way, if a "0" is recognised as an "o", you can prevent **Text Convert** from making a mistake.

4. Click in the small tab Text Output (on the left in the **Ambiguous Character** section).
5. Type: **0** (zero)
6. Select **Add**. "0" appear to the right in the Ambiguous Characters list box.
7. Type: **O** (Capital O).
8. Select **Add** again. "0" and "O" should be in the list box to the right.
7. Similarly, add "l" (Capital l) and "1" to the Ambiguous Character list.
9. Resulting text will be snapped to the nearest size in the **Text Sizes** list. Leave the value at its default of **3.5mm**.

Tab the **Character Recognition** for the **Recognition File** section controls which recognition files (suffix.*ICR*) are being used to recognise the raster text. Recognition Files contain sample raster text, which is compared to the text being converted, so it is important to choose file(s) whose samples best match the raster text being converted. For this tutorial you will use the sample, *TUTORIAL.ICR*.

10. Select **Open\New**. The **Open ICR File** dialog appears.

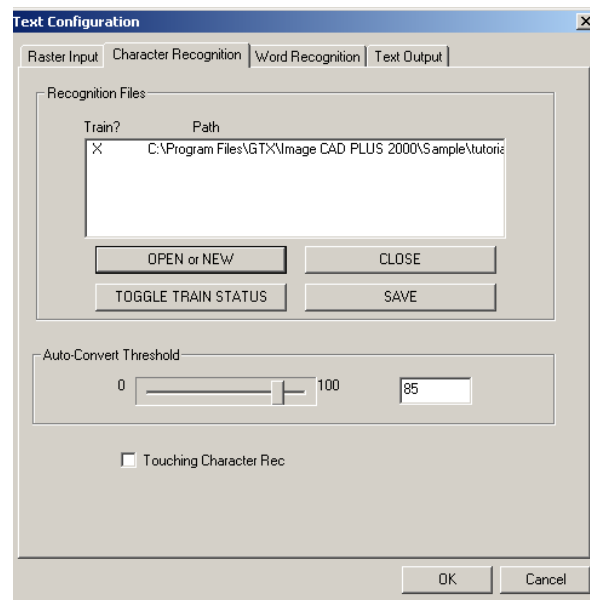

11. Select *TUTORIAL.ICR* and select **OK**.

The **Auto-Convert Threshold** determines the **confidence level** at which a character must be recognised for **Text Convert** to automatically convert it into text. Characters recognised at confidence levels below the Auto-Convert Threshold will be displayed in the Character Verification dialog before they are made into text entities.

12. The default value for the Auto-Convert Threshold is "100". Leaving it at this value would force the Character Verification dialog to appear for every character being converted. Instead, set this value to **85**. Characters recognised at a confidence above 85 will be automatically converted into text entities.

Now that you have configured text conversion you can now Convert the Raster text to Text.

Select **OK** to close the Text Configuration Dialog.

Convert To Text Icon

Select raster <Fence>:

1. Type: **textwin** to invoke the text window iop. In fact, you can select text with the "Fence" or "Inside" IOP methods unless the raster text is touching other raster geometry.

Select first corner of window:

2. Select a point above and to the left of the table.

Select opposite corner of window :


3. Select a point below and to the right of the table.

Select raster <TEXTWIN>:

4. Press **[RETURN]** to stop selecting raster.

Processing Image.....

5. The Character Verification dialog will appear for each ambiguous character and for each character recognised at a confidence level below that of the Auto-Convert Threshold.

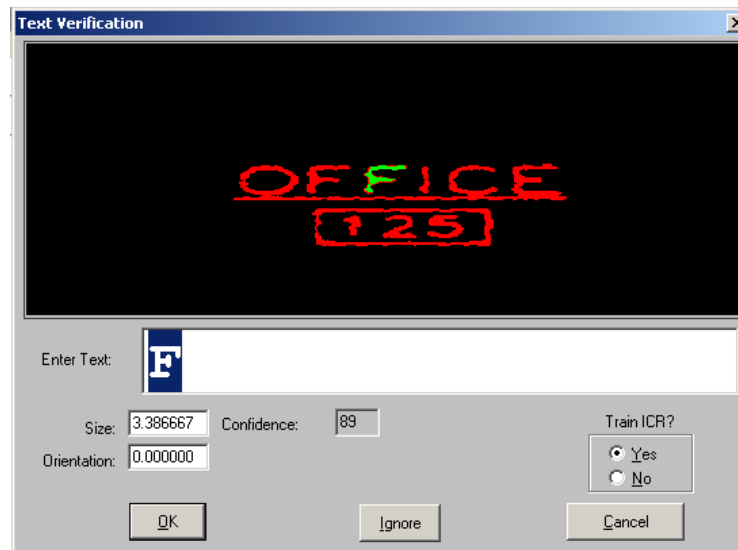


Each ambiguous character; "O", "0", "1", and "l" will appear for verification.

- If a character appears and is correct, press **[RETURN]** to accept **Text Convert's** evaluation of the character.
- If two characters appear connected together (touching text), type both characters and press **[RETURN]**. The raster will be split into two specified characters.
- If the character is not correct, type the correct character (you may want to activate the **[Caps Lock]**) and press **[RETURN]**.
- If non-text raster appears, select **Ignore** to skip converting this character into text.

Once the **Character Verification** dialog has shown each ambiguous or uncertain character, **Text Convert** will create CAD text entities in front of the raster text. This text can be edited using the **DDEDIT** command.

Once the option has been requested, select the TEXT you want to edit, a dialogue box shown below will appear, type in the correct text required.

PCNO.	NAME	MAT.	QUAN.	NOTES
101	BRACKET	C.I.	1	
102				
103				
104				
105	PULLEY	A.I.	1	DIECAST
106	BUSHING	BRO.	1	

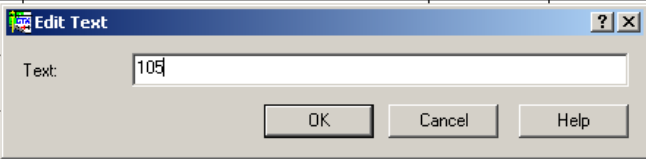

Save Your Work

(NOTE: This option is not available in Demo mode)

You can now save your work if you want to. This is done by using the **File\Save Vector as** command.

Every conversion command is the GTXImage CAD PLUS creates vector entities on the current layer. Raster-to-Vector commands will generate vector objects which inherit the properties of the current layer. The exception is when you are using the Line Width Configuration table to preserve the original raster line widths in the form of vector colours.

What You've Learned

Congratulations! You have now completed the tutorials.

In this lesson you have:

1. **Opened** a raster file
2. **Converted** Raster to Vector
3. **Traced** vector entities over raster data
4. **Configured** text conversion
5. **Converted** raster text into CAD entities
6. Used a variety of raster snapping features

Tutorial 3 – Working With Color Images

The GTXImage CAD series has been designed to work predominantly with binary (Black & White) images. It cannot directly work on, edit or convert color images like photos or high resolution color pictures.

However many color images use a limited number of colors. A good example of this is a road map where the data is displayed in a limited number of base colors.



In this example the roads are shown as black, the land contours are brown & the sea is blue. In these instances GTX provides commands to enable you to reduce the colors down to a more manageable range of colors. The GTX color related commands to do this are:



The best command to use depends mainly upon the number of colors that your image has.

Quick reduction to Binary.

If you wish to automatically reduce a color image down to a simple binary image you can use **gBITONAL**. The **gBITONAL** command has been optimized to operate on a broad range of color images & works well where an image has a clear-cut distinction between dark & light data.

However, the **gBITONAL** threshold may not give the exact results that you desire (by including or omitting important data from the binary image). In these instances it may be better to use the **gREDUCE** & **gSEPARATE** commands, where you have greater control of the color separation & threshold.


Load a Color Raster File

First of all you must load a color raster file. Click on the Quick Attach button in the **GTXImage CAD** toolbar.




The Quick Attach Button

When the Quick Attach button is pressed the **Open Raster File** dialog appears.

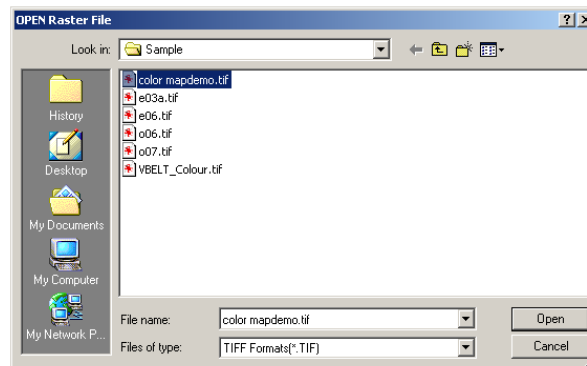

Select **color mapdemo.tif** and click **Open**. The image will then appear on the screen.

Color mapdemo.tif after opening

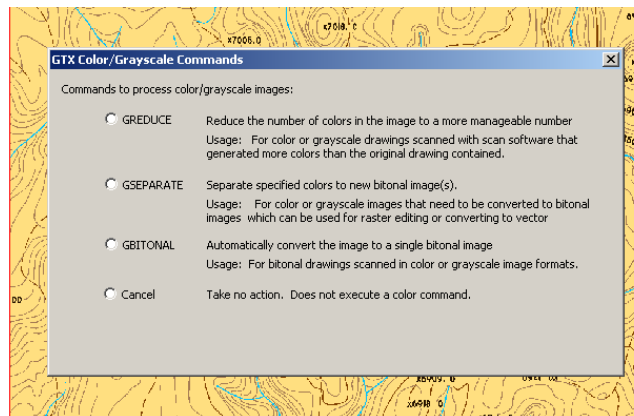

As you can see, you are presented with a dialog giving you various options, you can select to gReduce the image, gSeparate the image, convert the image to a Bitonal (Black & White) image or continue.

Select **Cancel**

Color Reduction

This part of the tutorial involves the Color Reduction process, we recommend that you first reduce the color image down to a manageable number of colors (between 4 to 256 colors) before you apply the Color Separation command.


Click on the **Color Reduction** button in the **GTXImage CAD** toolbar.



The Color Reduction Button


Notes:

If you have more than one color/greyscale image loaded you will be offered the 'Image selection' dialog box. You can then either select the image by name or you can pick it interactively using the 'Select Image on Screen' button.

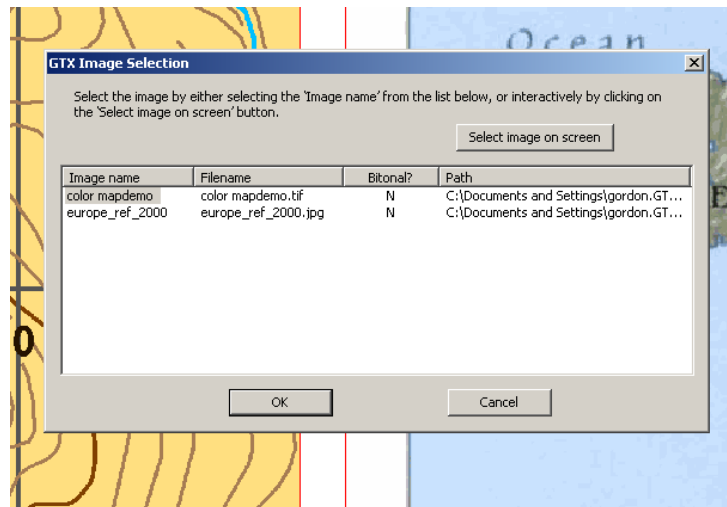

Once the Image has been selected the system will display the color reduction dialog. You can select the numbers of colors you wish to reduce to from a preset list in the range of between 4 to 256 colors.

Select the option to reduce the image to 4 colors. This is a manageable number of colors to use for the tutorial.

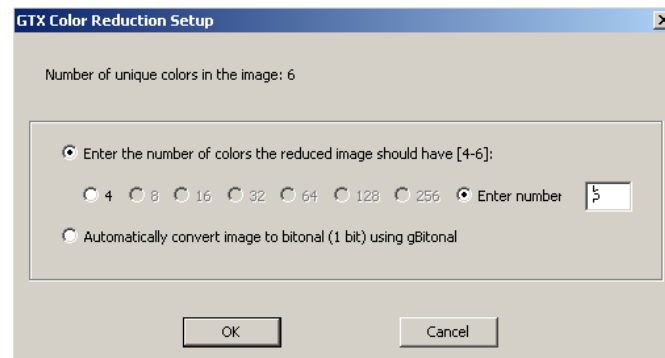

Or you can specify the exact number of colors. Or you can reduce to a bitonal image. Select the OK button to reduce the color image down to 4 colors

Color Separation

This part of the tutorial involves the Color Separation process gSEPARATE separates out individual colors, or selected groups of colors from a color image, & reduces them to a single binary (1 bit) image. The command can separate out to multiple binary images with each run of the command


Click on the **Color Separation** button in the **GTImage CAD** toolbar.



The Color Separation Button

If you have no color/grayscale images loaded & you will get an error telling you that you don't have a suitable image for gSEPARATE to work on.

Once the Image has been selected the system will display the 'Assign Image Layers' dialog.

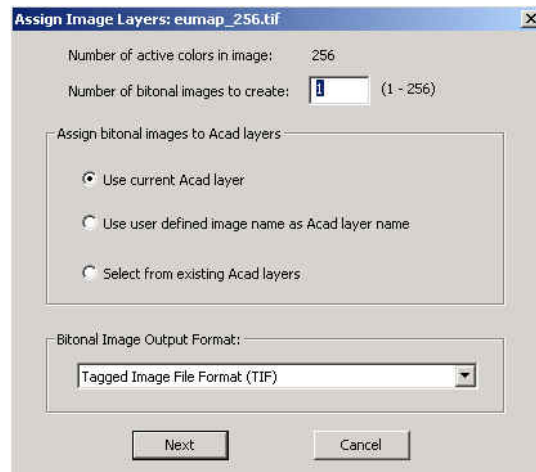

You can enter the number of binary images you wish to create (between 1 to 256 images).

The binary images created can be assigned to different layers. The layering naming can be controlled by selecting one of three options:

1) Use current Layer. In this instance the binary images will be put on the current AutoCAD layer.

2) Use User defined image name as layer name. This option will use the layer name to create a new layer with that name & the image will be placed upon that layer.

3) Select from existing Layers. This prompts the user to select the layer from the existing list of defined layers, for every new binary image created.


Next you can select the file format for the new binary images. Click on the down arrow to see & select the image format.

Select **NEXT** to move to the Color Separation dialog.

You can rename your binary image & layer in the top left hand corner of the dialog. By default the image names are numbers 1,2,3 etc. Highlight the layer number & you can enter a new name in the box above.


Then select **RENAME** to change the image name.

You can also add new images at this stage by selecting the **NEW** button.

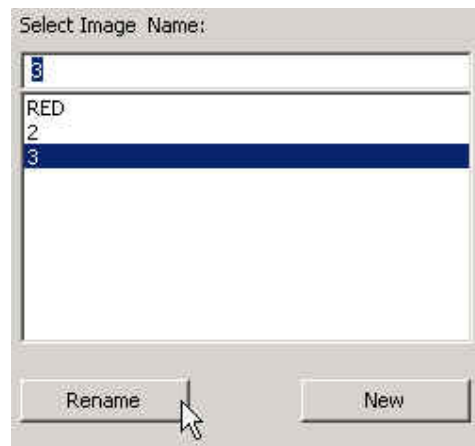

You can now move onto select the colors for a particular binary image.

Firstly highlight the image name you wish to work on. Then using the cursor 'drag & drop' the required colors from the left "Available selection panel" into the right "Assigned selection panel". You can pick the colors individually or in blocks. To select a block of colors hold down the left mouse button over the group of colors you wish to select.

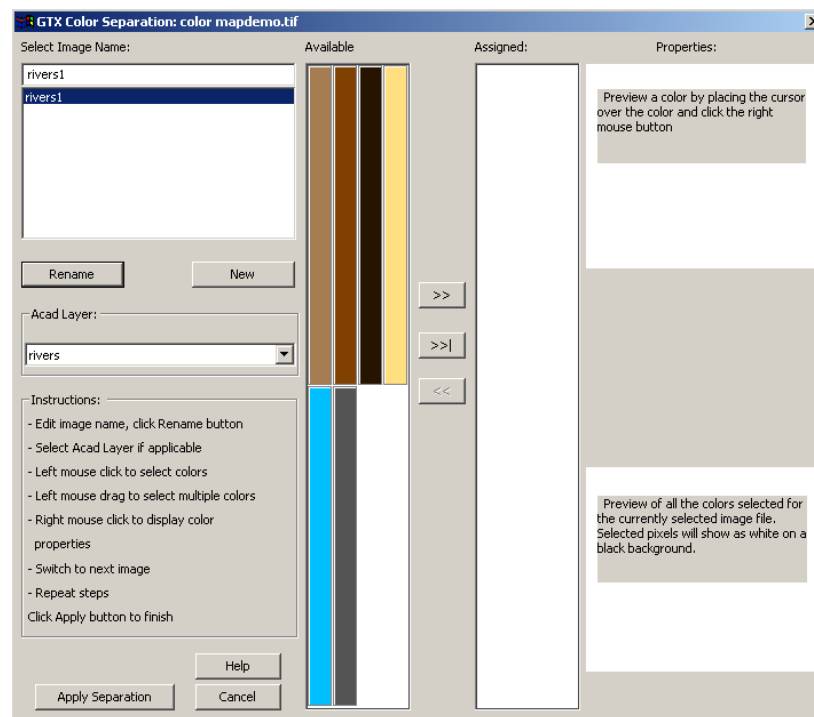

Colors with a notch in the bottom Left Hand corner indicate that they are colors that have already been selected on another image.



To help you select the correct colors & information the dialog automatically displays a view of the selected data on that layer.

When you have correctly assigned the colors to your respective images/layers select the **Apply Separation** button to create the new binary images.

Notes:

gSEPARATE only works if you have a color (or greyscale) image loaded.

Anti-Aliasing

Some color images are scanned with the 'anti-aliasing' option turned on. Anti-aliasing can enhance the quality of some images, particularly photographs. However it is not ideal for images with solid fill color as it tends to mix colors to achieve a more blurred image.

Whilst the gSEPARATE command will work with anti-aliased images the results may not be as good as required. As such we recommend that, if possible, images be scanned with anti-aliasing turned off.

Save Your Work

You can now save your work if you want to. This is done by using the **gSave** command.

What You've Learned

1. **Loaded** color Image.
2. **Reduced the color image down to a manageable number of colors.**
3. **Separated the image into a separate editable raster image.**

Command Reference

This section is your quick reference guide to the Menus and the Commands found within the GTXImage CAD Series software.

Function Keys





 

 
 

 
 




The function keys control useful features and modes. Here is a list of the function key controls:









F1	F2	F3	F4
Online Help	Text Window	List Vector Entities	Raster Drawing Status
F5	F6	F7	F8
Redraw	Toggle Coords	Toggle Grid	Toggle Ortho Snap
F9	F10	F11	F12
Toggle Snap	Toggle Status Bar	Zoom All	Zoom Previous

Raster Picking Options

 Most commands affect a subset of the raster image. To **gMOVE** a raster circle, you need to first pick that circle. The GTXImage CAD series uses **Intelligent Object Picking** (IOP) to pick raster entities from the drawing as if they were intelligent CAD entities. These options can be typed, found in the **GTX Edit>Raster Pick**, the toolbar or the screen menu.

The following list describes each IOP option:

Icon	Pick Option	Short	Description
	Add	ADD	Add data to the selection set (after using "remove")
	Remove	REM	Remove selected data from the selection set
	ALL	ALL	Select all raster on the current raster image
	AllText		Selects (or deselects) all text in the current raster image
	Window	W	Select all raster within a rectangular window
	Pwindow	PW	(Polygon Window)
	Crossing	CR	Select connected raster objects that are completely contained by or crossing the edge of a window
	Pcrossing	PC	(Polygon Crossing) Select raster that is completely contained by or crossing the edge of a polygon
	Inside	I	Select raster objects completely contained by a window
	Pinside	PI	Select connected raster objects that are completely contained by a polygon.
	Fence	F	Select connected raster objects that are intersected by a polyline
	Object	O	Select contiguous raster data within the current view
	ARc	AR	Select raster arcs under a reference arc
	2 Pick Circle	2P, 2PC	Select raster circle using a 2-point reference circle
	Circle	CI	Select raster arcs or a circle under a reference circle

Icon	Pick Option	Short	Description
	Line	L	Select raster lines under a reference line
	PRevious	PR	Pick the objects in the previous selection set
	Segment	S	Selects a linear raster segment in both directions from a pick until it stops or finds an acute angle or a branch
	TEXTLine	TEXTL	Select text-sized raster elements that are intersected by a reference line. Separates text from touching raster elements
	TEXTWindow	TEXTW	Select raster text elements that are within a rectangular window. Separates text from touching raster elements
	unDer	D	Pick raster under selected vector objects
	Undo	U	Remove data from the selection set added by the last pick made
	View	V	Select all raster data within the present view

Raster Object Snapping Options














The GTXImage CAD series provides transparent “raster snaps”. While using a CAD or Raster command, select Control-Right-mouse button to choose raster snaps from a pop-up menu.


















In addition to transparent raster snaps, the GTXImage CAD series includes the **gAUTOSNAP** command, enabling **Endpoint**, **Intersection**, **Nearest** and **Node** AutoSnap™ methods within active raster entities. The following table lists each raster snap option.


















Icon	Name	Keyboard	Description
	None	rnone	Disables previous snap mode settings
	Endpoint	'rend	Snaps to the nearest end of a raster entity
			Endpoint activates as running snap under AutoCAD's End AutoSnap™.
	Intersection	'rint	Snaps to the intersection of two or more raster entities
			Intersection activates as running snap under AutoCAD's Intersection AutoSnap™.
	Nearest	'rnea	Snaps to the centerline of the nearest raster object
			Nearest activates as running snap under AutoCAD's Nearest AutoSnap™.
	Edge	'redge	Snaps to the edge of the nearest raster object.
			Edge activates as running snap under AutoCAD's Node AutoSnap™.
	Center	'rcen	Snaps to the center of a circle or arc defined by three raster points
	Tangent	'rtan	Snaps to the point that, with the previous point, makes a line tangent to a circle or arc defined by three raster points. The first point defines the side of the circle or arc for the tangent
	Midpoint	'rmid	Snaps to the midpoint of a line defined by two raster points
	MidArc	'rmida	Snaps to the midpoint of a raster arc defined by the endpoints and a circumference point
	Perpendicular	'rper	Snaps to a point where the present entity being drawn will intersect perpendicular to a line defined by two points
	Perp-Arc	'rpera	Snaps to the point perpendicular to an arc defined by three raster points


















Raster Command Reference

This section defines GTXImage CAD's raster commands.

Icon	Command	Short	Description
	gAUTOCLEAN	GACLEAN	Automatically deskews and deletes noise in the active image. NEW IN VERSION 8.0
	gACTIVE	GAC	Prepares a selected image as the active image, ready for raster editing or conversion
	gADESKEW	GAD	Automatically rotates the current raster image to align raster to an orthogonal orientation. IMPROVED IN VERSION 8.0
	gARC	GAR	Draws a raster arc in the current raster image
	gAUTOSNAP	GAS	Enables AutoSnap™ options within active image entities
	gARRAY	GAR	Creates a circular or rectangular array from selected raster data
	gATTACH	GA	Quickly loads raster images
	gBITONAL	GBIT	Automatically reduces a color image to a binary (1-bit) image
	gBURN	GB	Converts all vectors to raster, “burning” them into the current raster image
	gCALIKE		Changes circles and arcs to have the same radius as a selected circle or arc
	gCELEV		Assigns incremental elevations to multiple polylines
	gCHANGE	GCH	Changes the size or position of a line, arc or circle
	gCHGLAY		Changes the layer of objects to that of a specified object

	gCIRCLE		Draws a raster circle in the current raster image
	gCLEANIOIP		Automatically deskews the active image and places speckles and other noise in a selection set
	gCONCEN		Moves circles and arcs to be concentric about a location or about the centerpoint of a specified circle or arc
	gCONVRT	GCO	Converts selected raster data to vector
	gCOPY	GCP	Copies selected raster data to a new location on the image, retaining the original
	gCAI		Copies all images
	gCREATE	GCR	Creates a new raster database or flush the current raster database
	gCROP	GCRO	Deletes all information outside of a specified window
	gCUT	GCU	Copies selected raster data to a file or buffer
	gDESKEW	GD	Aligns raster data in current raster image to 0 and 90 degrees
	gDRO_BK		Sets all image entities' draw order behind other entities
	gECONVRT	GEC	Creates a vector edge around selected raster
	gEDGE	GED	Creates a raster edge around selected raster
	gERASE	GE	Removes selected raster data
	gFRZLAY		Freezes the layer of a specified object
	gHELP		Launches the online help
	gINFO	GI	Displays information about the raster database

	ImageFrame		Configures the Image Frame
	ImageTransparency		Controls image transparency
	gINACTIVE	GINA	Deactivates the currently active image, freeing memory
	gINVERT	GIN	Reverses the raster foreground and background data Useful for raster scanned from negative images
	gISOLAY		Freezes all layers except that of a selected object
	gJOIN		Joins lines
	gLINE	GLI	Draws lines on current raster image
	gMIRROR	GMI	Mirrors selected raster data
	gMOVE	GM	Moves selected raster data
	gMAI		Moves all images
	gOFFSET	GOF	Creates concentric raster circles, parallel raster lines and parallel raster arcs
	gOSR		Invokes GTX OSR for doing batch raster-to-vector conversion
	gPASTE	GP	Pastes raster data from a raster file or a buffer created with gCUT
	gRAHEAD		Erases "arrowheads" (solids with three points)
	gRASTER	GRA	Converts selected vector entities to raster
	gREFLECT	GREF	Mirrors the entire image in either the X or Y axis, replacing the original image
	gRELIMIT		Combines trim and extend for lines

	gRESIZE	GRE	Resizes the image entity (Adds or removes pixels without scaling the image entity)
	gROTATE	GR	Rotates selected raster data
	gRAI		Rotates all images
	gREDUCE	GREDD	Reduces a multi-color image to a more
	gRUB	GRU	Erases raster data under selected vector data
	gSAVE	GSA	Saves the raster image
	gSEPARATE	GSEP	Separates colors to discrete bitonal images
	gSCALE	GS	Scales selected raster data
	gSAI		Scales all images
	gSETLAY		Sets the current layer to that of a specified entity
	gSMOOTH	GSM	Smoothes selected raster
	gSPECKL	GSP	Perform raster object speckle removal to selectively erase background noise or fill in holes in the raster image
	gTCONFIG	GTCFG	Configures Text Window IOP, Text Line IOP and the gTCONVRT/gTRAIN commands
	gTCONVRT	GTC	Converts raster text to CAD text entities
	gTRACE	GT	Traces vector lines, arcs, and circles over selected raster geometry (raster is preserved)
	gTRAIN	GTR	Previews and edits text recognition files used by gTCONVRT
	gTRANS_ON		Makes all images transparent



gTURN

GTU

Reorients the work area (and image) by 90, 180 or 270 (-90) degrees



gVECTOR

Traces raster to vector lines, arcs and circles



gVSKEW

Deskews vector data





gWARP

GWA

Corrects distortions in an image

Note: For the Vector or CAD commands you will need to refer to the more detailed GTXImage CAD series manual - **ICAD88 manual.pdf**.

We trust that this demonstration Guide has given you a clearer understanding of the GTXImage CAD *PLUS* Series products. For further information or questions on any of the GTX products on this CD, please feel free to contact us for the name of your nearest GTX Authorised Reseller.

GTXImage CAD™ Series V11.5

Where Paper and CAD Connect™

Autodesk
Authorized Developer

AutoCAD®
2008
Compatible

Autodesk

GTX Corporation
15333 North Pima Road,
Suite 116
Scottsdale, Arizona 85260
USA
Email: info@gtx.com
Phone: (480) 889 8600
Fax: (480) 889 8610

GTX Europe Ltd
Unit 8 Cedarwood,
Chineham Business Park,
Basingstoke, Hants
RG24 8WD-UK
Email: info@gtx.co.uk
Phone: +44 (0) 1256 814444
Fax: +44 (0) 1256 364887

REMARKS:

GTX®, GTXRaster CAD®, GTXRaster CAD® PLUS and Intelligent Paper to CAD Solutions® are registered trademarks of GTX.
 GTXImage CAD™, GTXImage Edit™, GTXImage CAD PLUS™, GTXSmartCAD Edit™, GTX@ICR PLUS™, Intelligent Object Picking™
 AutoClean™ & GTXScanClean™ are trademarks of GTX. U.S. Patent No. 7,016,536 applies.
 Windows® is a registered trademark of Microsoft Corp.
 AutoCAD® & Autodesk® are registered trademarks of Autodesk, Inc.

Macrovision® is a registered trademark of Macrovision Corporation.
 FLEXENABLED™ is a trademark of Macrovision Corporation.

CQuanizer © is copyright of Jeff Proise 1996-1997
 All other brand names, product names, service marks or trademarks belong to their respective holders.
 ©Copyright GTX Corporation 2008. All Rights Reserved.